

Elill Elille

MAVERICK QUICK START GUIDE

A HERITAGE OF INNOVATION

You put your blood, sweat and tears into everything you do. Elgin products are made with that mantra in mind and more importantly, they are made for you.

We create tools that amplify the output of the everyday craftsman—the unapologetic, under-appreciated working class responsible for laying the brick & mortar of America. We believe there is no audience more inspiring or deserving to serve than this one, and it's our responsibility to enhance their workday with thoughtfully crafted products that combine cutting-edge tech with rugged & familiar designs.

Thank you for using the Elgin Maverick Flashlight.

Team Elgin



WHATS IN THE BOX

Maverick Unit

Zipper Case

Lithium Battery


Charger Wire

Wall Mount


Screws

User Guide

Warranty Card

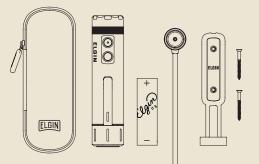

SPECIFICATIONS

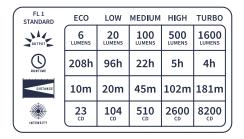

INGRESS PROTECTION RATING

Your Elgin Maverick features an IP66 rated enclosure that protects against dust, sweat and water. The Maverick is not designed for prolonged submersion in water. In case of submersion in water, quickly remove from water and air dry before use.



MAVERICK

CHARGING THE MAVERICK


The rechargeable lithium-ion battery pre-installed in the Maverick is partially charged out of the box. However, we recommend charging it fully before first use.

ATTENTION: Only use the supplied USB Magnetic cable to charge your Maverick.

To charge the Maverick, connect the provided charging cable to the magnetic charging port located on the bottom of the flashlight.

The LED indicator will turn red while the Maverick is charging. Once charging is complete, the LED indicator will turn green.

Approximate charge time is 3 hours.

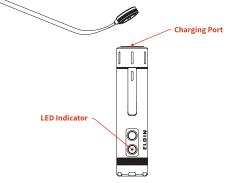

OPERATING THE MAVERICK

ELGIN

The Maverick ships with the brightness level set to Eco. Press the Mode Button to cycle through each brightness level: Low, Medium, High, and Turbo. The Maverick will default to the last used brightness mode.

Power On/ Off: Press the power button once.

Next Brightness Mode: Press the mode button.

Low Battery Reminder: When the battery level falls below 3%, the LED will flash red.

🔆 Charging

🔆 Fully Charged

- 🔆 100% to 40%
- 🔆 39% to 10%
- 🔆 9% to 4%
- 🔆 3% to 0%


REPLACING BATTERIES

All rechargeable batteries will eventually lose the ability to hold a charge. To replace the battery in the Maverick:

Rotate the battery cap counterclockwise and remove to expose the battery.

Slide out the old battery.

Insert the new battery into the compartment positive end first.

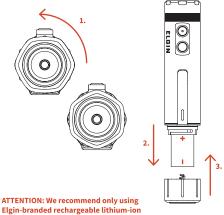

batteries in the Maverick.

BATTERY SAFETY INFORMATION

Rechargeable lithium-ion batteries can EXPLODE, CATCH FIRE, and/or CAUSE BURNS if disassembled, cut, crushed, short-circuited, punctured, or exposed to water, fire, or high temperatures.

DO NOT use any batteries advertised or promoted specifically for use in cameras or for other low-drain purposes in Elgin LED light products. Use only batteries labeled as safe to use in high-performance, high-drain devices that contain built-in fault and heat protection.

DO NOT put loose batteries in a pocket, purse, or other receptacle containing metal objects.

DO NOT store batteries with hazardous or combustible material. Always store in a cool, dry, ventilated area.

ALWAYS keep batteries away from children.

REPLACE ALL batteries at the same time and follow directions in the user manual for replacing batteries.

ONLY USE rechargeable batteries sold at ElginUSA.com as these rechargeable batteries are expressly for use in high-drain devices.

ONLY USE the charging cable or device that shipped with your product to charge rechargeable lithium-ion batteries.


In the unlikely event rechargeable batteries catch fire, DO NOT attempt to put the fire out with water—use a Class A, B, or C fire extinguisher.

Follow all applicable laws and regulations for transport, shipping, and disposal of batteries.

Failure to follow these warnings and/or directions could result in damage that may not be covered by Elgin's warranty.

INSTALLING THE CHARGING WALL MOUNT

Firstly route the charging wire through the wall mount like so, or facing down if the charging point is below. Ensure the charging pad at the end of the charging cable is facing up.

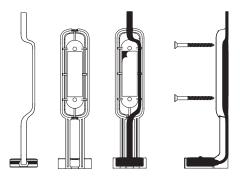

Secondly remove the adhesive tape backing from the back of the wall mount and adhere to desired location.

Finally, use the included screws to mount the charging base station securely to a flat surface.

SAFETY INFORMATION

DANGER! MAY CAUSE DAMAGE TO EYESIGHT. Directly looking at or shining the light into another person's eyes, may cause temporary blindness or irreversible eye damage.

DANGER! LITHIUM-ION BATTERIES ARE COMBUSTIBLE. Improper use or lack of maintenance could cause permanent damage to the flashlight, property or inflict bodily injury.

CAUTION! FLASHLIGHT MAY GET HOT. Never touch the lens of the flashlight or put it back in the storage case during or immediately after use.

NOTICE! Elgin USA is not liable for damage or injuries resulting from misuse, improper maintenance, or batteries and chargers incompatible with the Maverick and its accessories.



CARE AND MAINTENANCE

To clean the Maverick use a damp cloth, with or without mild soap, to gently wipe away dust and dirt. Never use harsh or abrasive cloths or cleaners on any part of the Maverick.

CONTACT US

For questions or information regarding the Elgin Maverick or our other products, please contact us at support@elginusa.com, visit ElginUSA.com or simply scan the following QR code:



PARTS & ACCESSORIES

Genuine Elgin USA parts and accessories are available at ElginUSA.com/elgin-parts-accessories or simply scan the following QR code:

